




**ALPINE AEROTECH LTD.**  
www.alpineaerotech.com



1260 Industrial Road, Kelowna, B.C., Canada V1Z 1G5  
Phone: (250) 769-6344 Fax: (250) 769-6303  
admin@alpineaerotech.com

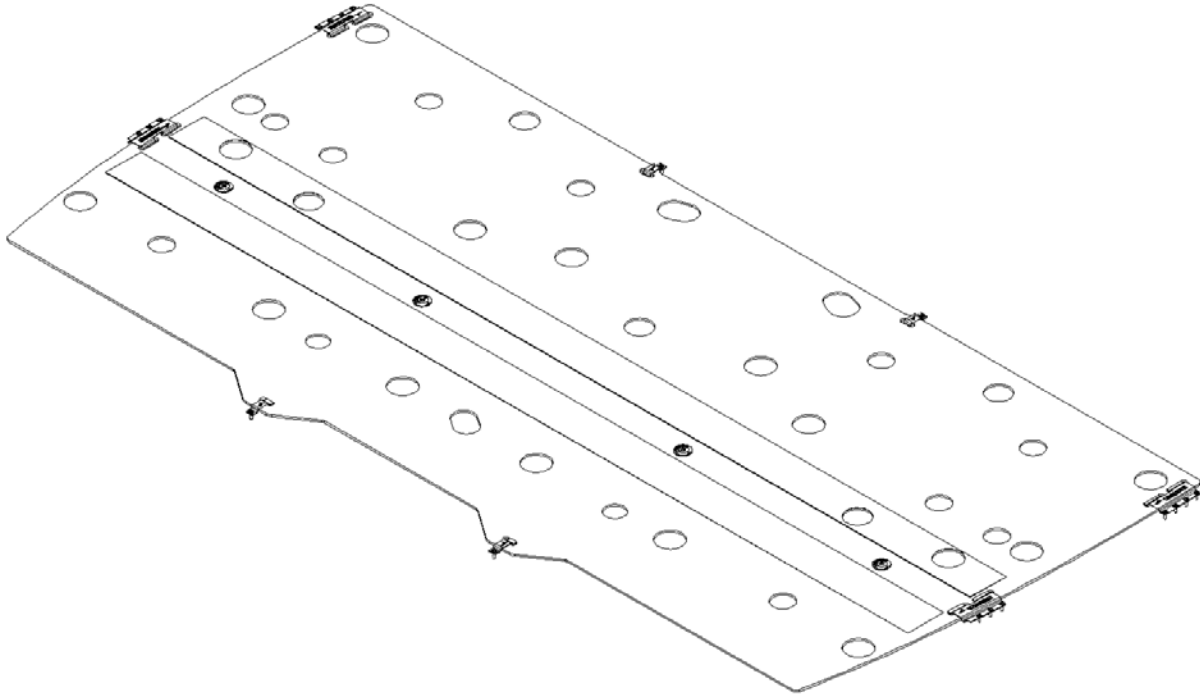

## **FLOOR BOARD, KIT, FWD MAINTENANCE MANUAL SUPPLEMENT**

**MODELS: BELL 205, 212, 412, 412CF & 412EP**  
**(Without Airline Seat Provisions)**



---

## **General Notes**

1. Refer to the current revision of the applicable BHT Maintenance Manual, BHT-205A1-MM, BHT-205B-MM, BHT-212-MM or BHT-412-MM, or DND Maintenance Manual, C-12-146-000/MF-001, for the chapter(s) referenced within this document.
2. Refer to the Floor Board, Kit, FWD Illustrated Part Breakdown and Installation Instructions for the replacement of damaged or worn items contained within this document.
3. Repairs are not permitted. Contact Alpine Aerotech Ltd. for further information.

## **Supplement to Chapter 5, Inspections and Component Overhaul Schedule**

### **Inspection Notes**

1. Perform Daily Inspections every day, prior to flight operation.
2. Perform 100 hour/12 Month Inspections every 100 hours or every 12 months, whichever occurs first, or if damage is detected in Daily Inspection, prior to flight operation.
3. General Inspections are non-thorough, visual/manual checks.
4. Detailed Inspections are in-depth, thorough checks.

### **Daily Inspection**

1. Perform a General Inspection on all items to ensure proper security.

### **100 Hour/12 Month Inspections**

1. Perform a Detailed Inspection on all items to ensure proper security.
2. Perform a Detailed Inspection on all fasteners/hardware to ensure proper security/torque.
3. Perform a Detailed Inspection on all items/materials to ensure proper integrity.
4. Perform a Detailed Inspection on the Floor Board Assy to ensure that it is not delaminating.
5. Perform a Detailed Inspection on the grip tape for wear. Should the grip tape be worn, contact AAL for replacement.