




1260 Industrial Road, Kelowna, B.C., Canada V1Z 1G5 Phone: (250) 769-6344 Fax: (250) 769-6303 admin@alpineaerotech.com

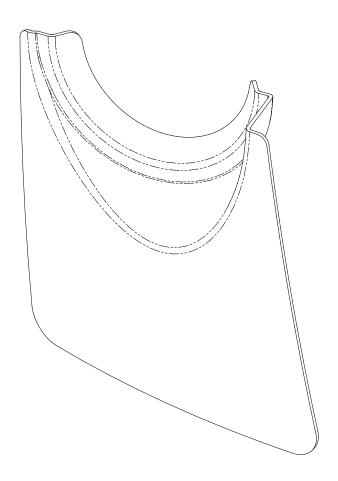

PANEL GUARD MAINTENANCE MANUAL

MODELS: BELL 407

Revision: NI

Date: 2003-04-16 Doc. No.: AAL-312-015-101 Page 1 of 2





admin@alpineaerotech.com

General Notes

- 1. Refer to the Panel Guard Illustrated Part Breakdown and Installation Instructions for the replacement of damaged or worn items contained within this document.
- 2. Repairs are not permitted. Contact Alpine Aerotech Ltd. for further information.

Inspections and Component Overhaul Schedule

Inspection Notes

- 1. Perform Daily Inspections every day, prior to flight operation.
- 2. Perform 100 hour/12 month Inspections every 100 hours or every 12 months, whichever occurs first, or if damage is detected in Daily Inspection, prior to flight operation.
- 3. General Inspections are non-thorough, visual/manual checks.
- 4. Detailed Inspections are in-depth, thorough checks.

Daily Inspections

1. Perform a General Inspection on all items to ensure proper security.

100 Hour/12 Month Inspections

- 1. Perform a Detailed Inspection on all items to ensure proper security.
- 2. Perform a Detailed Inspection on all items/materials to ensure proper integrity.
- 3. Perform a Detailed Inspection on the Panel Guard, Detail to ensure that it is not delaminating from the Side Body Fairing.

Revision: NI

Date: 2003-04-16 Doc. No.: AAL-312-015-101 Page 2 of 2