




ALPINE AEROTECH LTD.
www.alpineaerotech.com



1260 Industrial Road, Kelowna, B.C., Canada V1Z 1G5
Phone: (250) 769-6344 Fax: (250) 769-6303
admin@alpineaerotech.com

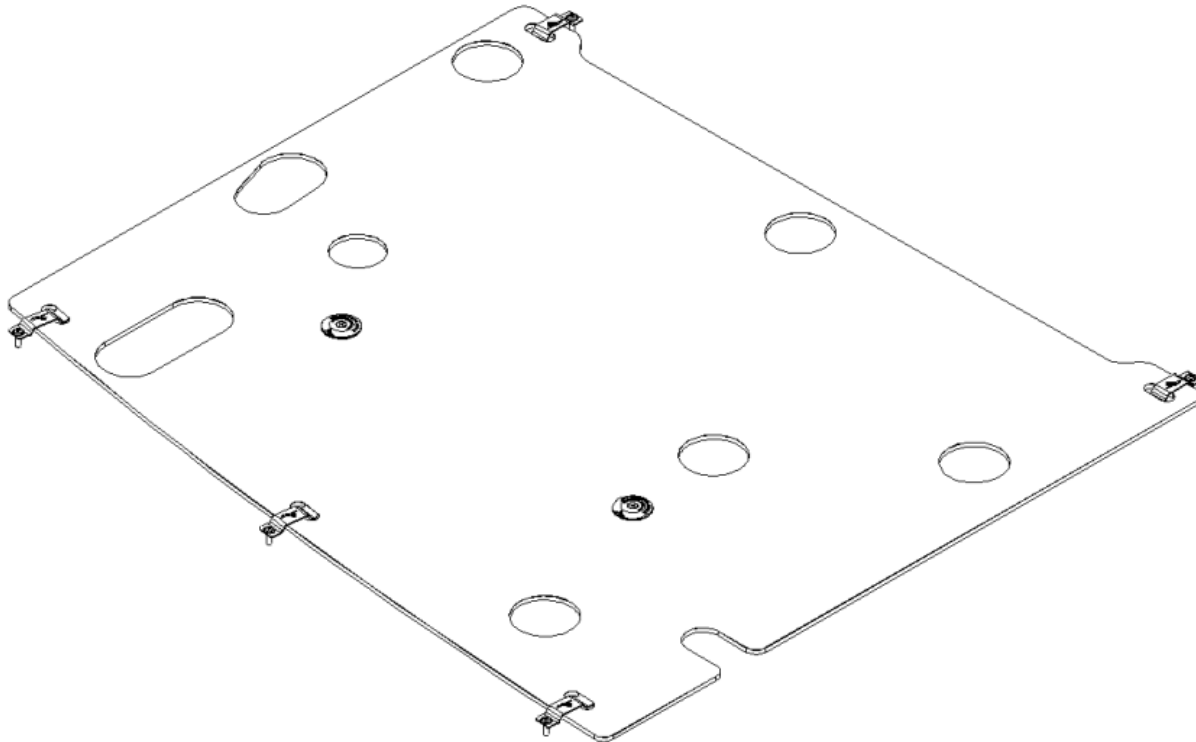

FLOOR BOARD, KIT, RHS INSTALLATION INSTRUCTIONS

MODELS: BELL 205, 212, 412, 412CF & 412EP
(Without Airline Seat Provisions)

Read all of the installation instructions thoroughly
prior to the installation of this product



Weight & Balance

<u>Part Number</u>	<u>Description</u>	<u>Weight</u>	<u>Long. Arm</u>	<u>Lat. Arm</u>
AAL-212-020-018	Floor Board, Kit, RHS	5.22*	146.87	30.19 RBL
		2.37 (Kg)	3.73 (m)	0.77 (m) RBL

* Total increase in weight to aircraft.

General Notes

1. All Installation Instructions must be completed in accordance with standard aircraft practices. Refer to the current revision of the FAA manual AC 43.13, Aircraft Inspection, Repair & Alterations, for instructions.
2. All Hardware must be torqued to standard aircraft specifications. Refer to the current revision of the FAA manual AC 43.13, Aircraft Inspection, Repair & Alterations, for instructions.
3. All Dimensions are in imperial measures (inches/pounds).
4. Refer to the Floor Board, Kit, RHS Illustrated Parts Breakdown for the part numbers of the items contained within this document.
5. Refer to the Floor Board, Kit, RHS Maintenance Manual Supplement for the inspection and maintenance of the items contained within this document.

Installation Notes



Additional cutouts may be added as required. If additional cutouts are added, Weight & Balance must be recalculated accordingly.



Installation Instructions

1. Temporarily remove the 2 Man, RHS, outboard facing seat/seat legs and any other fixed or loose items that may obstruct the installation of the Floor Board Assy, Item 1.
Reference Figure 1.

NOTE: Removal of the Stanchion Post assy is not required.

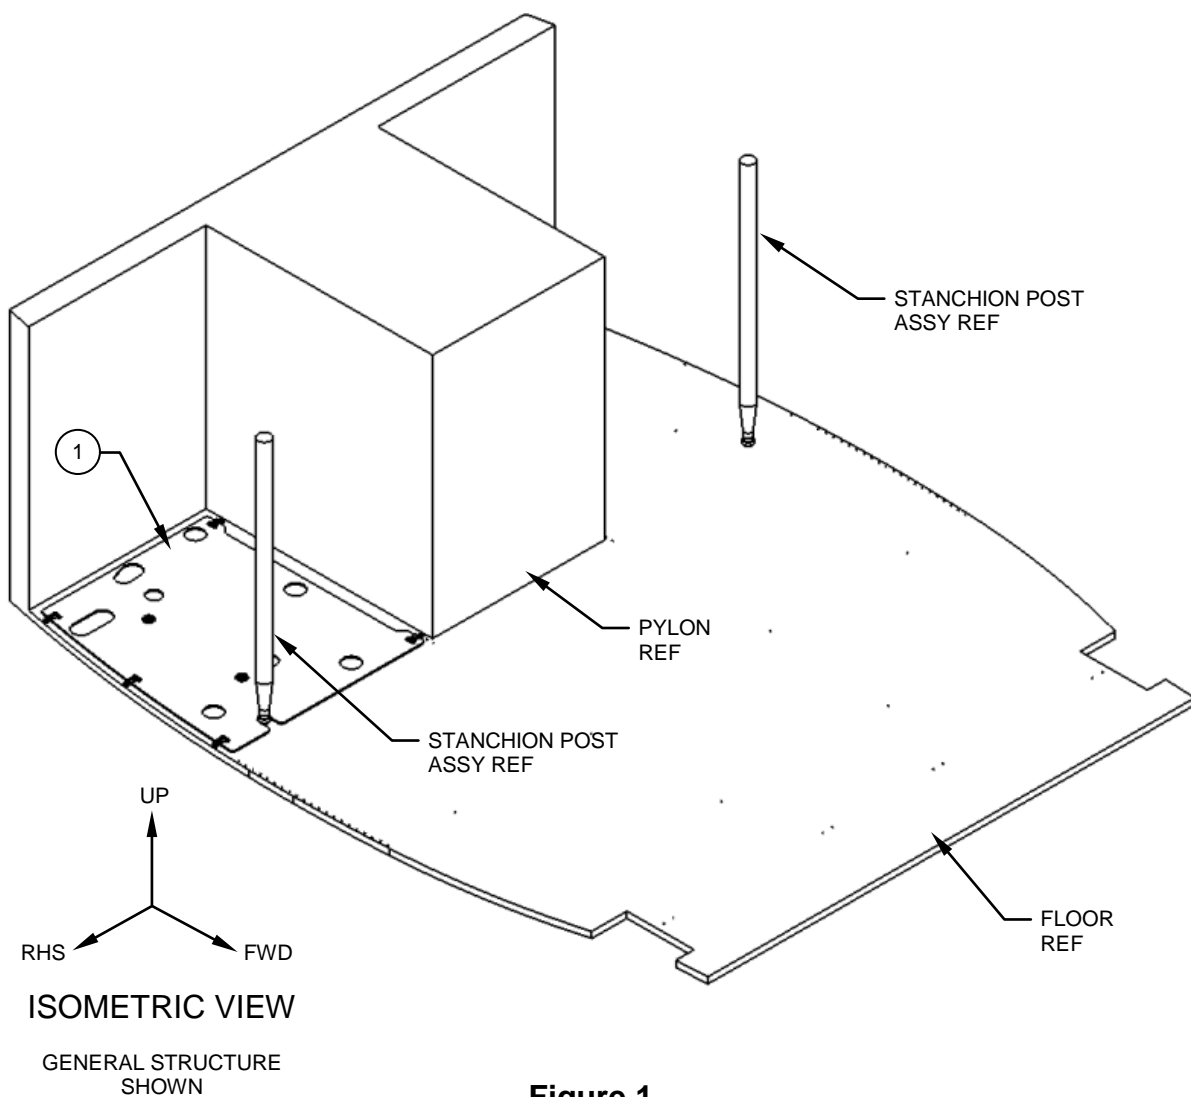


Figure 1



Installation Instructions

2. Install the Floor Board Assy, Item 1, as shown. Reference Figure 2.
3. Remove and discard the existing floor panel hardware, 7 places, from the locations shown. Reference Figure 2.

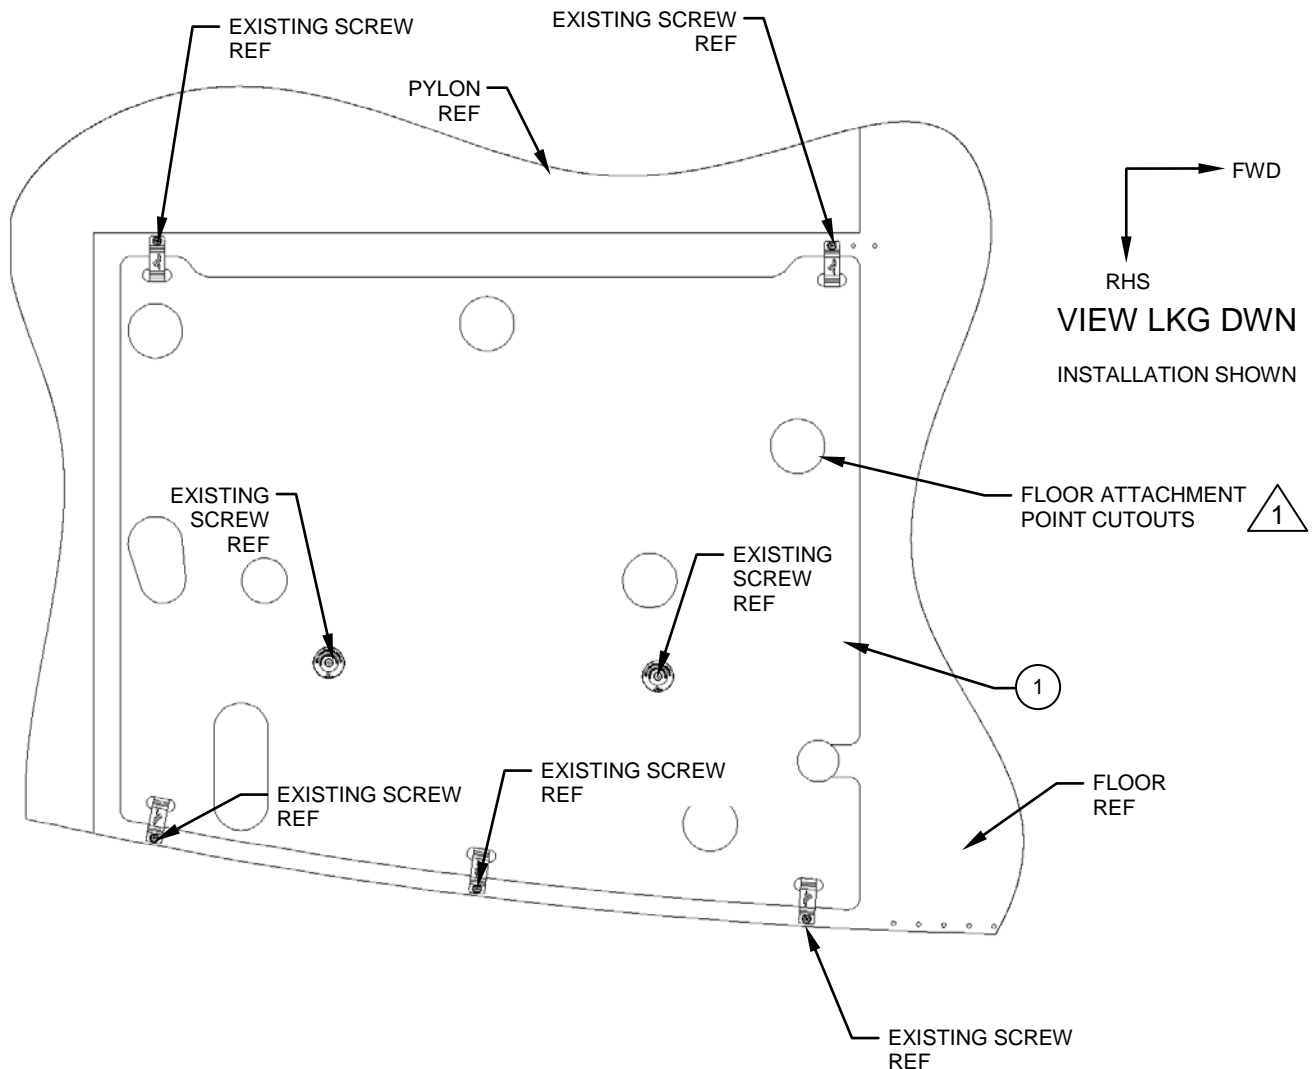


Figure 2



Installation Instructions

4. Install the Clip Detail, Item 2, and mounting hardware in the existing hardware locations. Reference Figure 3 & 4.
5. Install the Retainer Detail, Item 5, and mounting hardware in the existing hardware locations. Reference Figure 3 & 5.


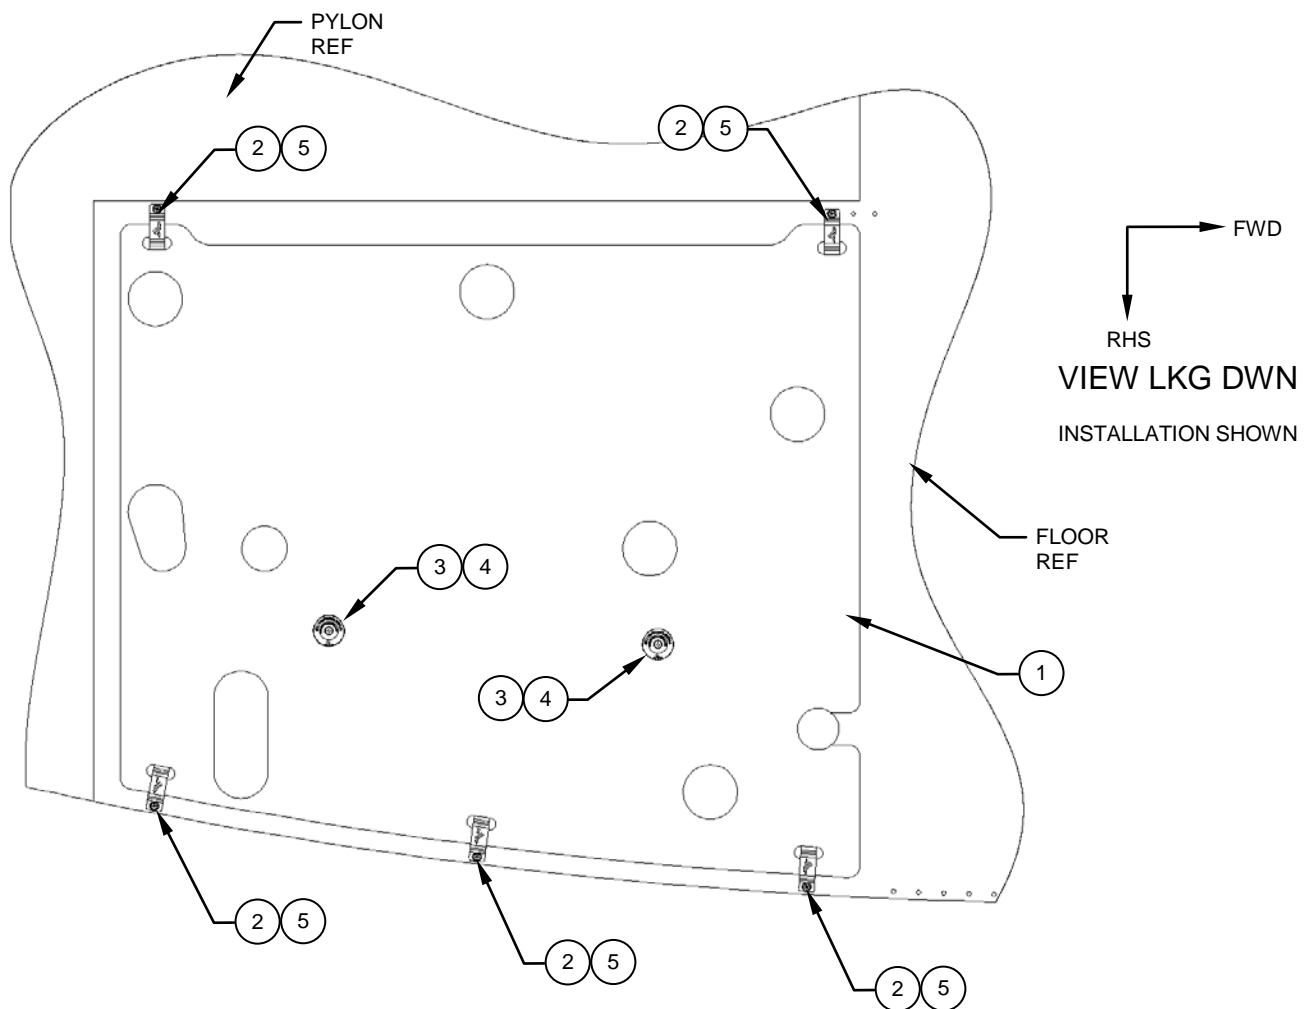



Figure 3

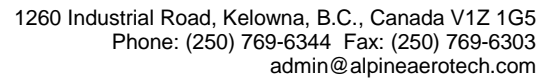

A line drawing of a curved surface, possibly a car body panel, with a horizontal trim strip. A dashed vertical line indicates the centerline of the trim strip. A small rectangular plate with a circular hole is positioned on the trim strip. A circular reference point labeled '2' is located above the trim strip, with an arrow pointing to the center of the circular hole. A circular reference point labeled '5' is located to the right of the trim strip, with an arrow pointing to the right edge of the rectangular plate. A circular reference point labeled '1' is located to the right of the trim strip, with an arrow pointing to the right edge of the trim strip. A circular reference point labeled '3' is located below the trim strip, with an arrow pointing to the bottom edge of the trim strip. A circular reference point labeled '4' is located below the trim strip, with an arrow pointing to the bottom edge of the trim strip. The text 'FLOOR REF' is located to the left of the trim strip, with an arrow pointing to the bottom edge of the trim strip. The text 'EXISTING HARDWARE LOCATION REF' is located below the trim strip, with an arrow pointing to the bottom edge of the trim strip.



Figure 4

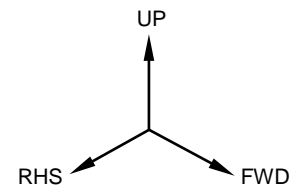

ISOMETRIC VIEW

Figure 5



Installation Instructions

Grip Tape Install

6. Placement of the Grip Tape is optional. It's location is approximate and can be placed to suite the individual operators needs. See Figure 6.
7. Trimming may be required to clear the existing floor cutouts.

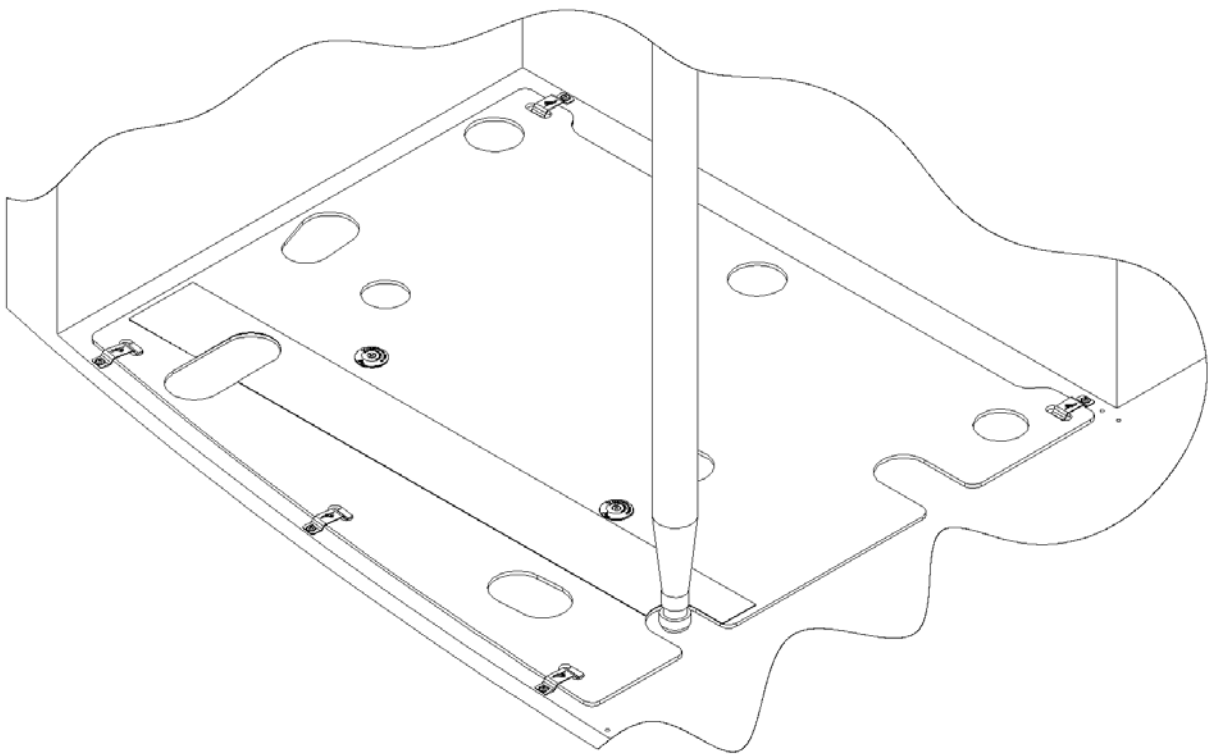


Figure 6

8. Ensure that adequate pressure is applied to promote a good bond between the grip tape and panel assy. **NOTE:** The tape will go from a milky to a more translucent appearance once it has bonded properly.



ALPINE AEROTECH LTD.

www.alpineaerotech.com



1260 Industrial Road, Kelowna, B.C., Canada V1Z 1G5

Phone: (250) 769-6344 Fax: (250) 769-6303

admin@alpineaerotech.com

-
9. Re-install the 2 Man, RHS, outboard facing seat/seat legs and any fixed or loose items previously removed. Reference Step 1.
 10. Installation complete.
 11. Perform a general inspection of all items to ensure proper installation.
 12. Update the aircraft log book for the installation of the Floor Board, Kit, RHS.